


## Operating Manual of 3038B Cold-Hot-Warm Spraying Machine

1. This machine has the following features, which are able to enhance its durability.

|                                 |           |
|---------------------------------|-----------|
| Maximum power for hot spraying  | 750W      |
| Maximum power for cold spraying | 50W       |
| Rated voltage                   | 110V/60Hz |

① Features:

- A. Cold water tank is separated from hot water tank.
  - B. Origination of cold-hot double spraying, which separates cold spray channel from hot spray channel.
  - C. Use of imported parts.
  - D. Stainless steel heating pipe is used as hot spraying heating pipe.
  - E. European water level detection method is used to switch off power when no water is available.
- ② Sufficient cold spray. Cold and hot spray can form warm spray when used simultaneously.
- ③ Nice, elegant and easy to operate.
- ④ Low price.

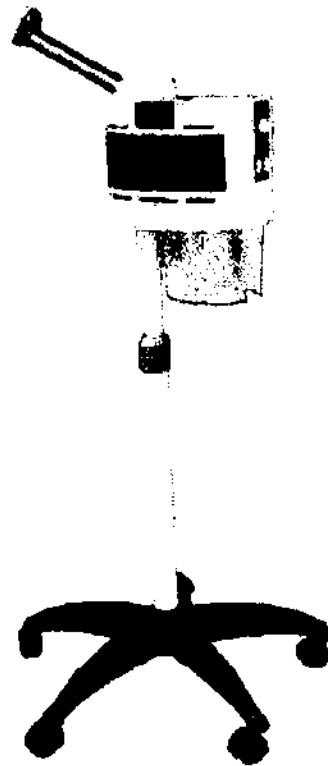

2. Procedure for installation and operation (as shown in the figure).

- ① Place the five legs into their positions respectively.
- ② Put the lifting rod into the center hole of the leg support.
- ③ Use a nut to compress the circular presser tightly against the lifting rod.
- ④ Place the machine onto the support stably.

- ⑤ Fill the cold water bottle with water and then place it upside down on the machine.
- ⑥ Press the hot water cup upward and then screw it.
- ⑦ Fill water into the hot water cup from the hot-spraying water-filling opening until the water level gets close to the high limit for water filling.
- ⑧ Switch on power.
- ⑨ Press the switch and begin the operation.

### 3. Attention for operation

Do not place the machine upside down or tilt it when it is in operation. Do not operate cold spraying or hot spraying when there is no water. Do not use water to wash the machine. Change the water inside the cold water tank and the hot water tank and clean them frequently, and power supply plug must be unplugged before water changing and draining. Drain all the water out of the machine if it is not used for a long time. **Special attention: Water level must not exceed the hot water cup's high limit for water filling.**

### 4. Attention for repairs

This machine has been tested and examined strictly before leaving the factory. In case any fault occurs during its operation, please send the machine for repairs to our company's distributors or special repair shops in different places. Non-professionals shall not disassemble the machine.